Image Controller Easy

1

2

Setting	TX-Hybrid	RX-JQ	1HDR			
MyCall		.1018	IDR		🗌 Ja	nanese
JTDX Lo	a Dir	C:\Users\	PCUser\AppDa	ta\l ocal\J		Set
OnAir Fr	equency	14.075M	H7	tu izoouno i	- DA	~
			-			
RX Ir	nage Pop nage Pop	up 30	QSO Mo	de 🗌 W 🗌 AI	<mark>/ho is o</mark> uto Stai	n air rt
Auto	matic Re	port	Do Macro @U	Ipioad 🖂	UTC	Dav
	(v18.1.0.8	37 or New	er 201902	D	SK Off	Nic
Picture	e Size and	Font		1. 6.	JK OH 7	
Max V	Vidth 10	24 ~ 1	Max Height 90	0 ~ 🖂	Heigh	t Limit
🗹 Ex	pantion w	hen smal	ler pic is loade	d Font	Registr	ation
Max	Saved RX	Chec	k RX Folder	Max 20	00	
Digi Si	to Convor	IOAUD				
Digi Sil	te server	JQ1HD	R Auto Uj	pload Digis	inte	
My Ima	ige Servei	Hybrid	Use My	Image Se	rver for	TX
		U				
Decode	Timing se	C 2			Show	Traffic
Decode	Timing se	90 2 1	~		Show	Traffic
Decode	Timing se	90 2 1	×] Show	Traffic
Decode His Call	JH3FDR	Name	OM troller Fasy222	SNR	-8	Traffic
lis Call	JH3FDR come to Ir dy for star	Name Nage Con	OM troller Easy>>>	SNR	-8 Waitin	ng !!!
His Call < Read My S	JH3FDR come to Ir dy for star	Name Nage Con t !!! >>>	OM troller Easy>>>	SNR	-8 Waitin	ng !!!
His Call <<< Read My S	JH3FDR JH3FDR come to Ir dy for star	Name Name Name Name	OM troller Easy>>>	SNR 7) Usa	-8 Waitin	ng !!!
His Call <	JH3FDR JH3FDR come to Ir dy for star Server	Name Name nage Cont III >>>	OM troller Easy>>>	SNR	-8 Waitin	ng !!!
His Call <	JH3FDR JH3FDR come to Ir dy for star server	Name Name Name nage Cont III >>>	OM troller Easy>>> ered as right li a and input	SNR	-8 Waitin	ng III × Setting
His Call Kis Call Kis Call My S My S TX Pict Please below of	JH3FDR JH3FDR come to Ir dy for star server RL Master select or data.	Name Name nage Con t !!! >>>	OM troller Easy>>> ered as right li 1 and input	SNR SNR Juse St, J011 J011	-8 Waitin	ng III × Setting
His Call <<< Weld <<< Read My S TX Pict Your UF Please below of CMD Na	JH3FDR come to Ir dy for star erver RL Master select or data. ame JC	Name Name Name Name Name Name Name Name	OM troller Easy>>> ered as right li 1 and input	Use st, Join Join Join Join Join	-8 Waitin DR DDR2 (IDR3 W Pass	ng !!! × Setting wword
His Call <	JH3FDR come to Ir dy for star Server select or data. ame JC rver j.	Name nage Con t !!! >>> r is regist r is regist e of then 21HDR	OM troller Easy>>> ered as right li 1 and input	SNR SNR (7) Use st, JQ1H JQ1H JQ1H Show	_8 Waitin DR2 (JDR2 (JDR3) W Pass	ng III × × Setting word
His Call His Call His Call His Call My S TX Pict Your UF Please below G CMD Na FTP Se User ID	JH3FDR come to Ir dy for star Server RL Master select or data. ame JC rver Ju	Name nage Con t !!! >>> er r is regist p1HDR (OM troller Easy>>> ered as right li n and input 2)	SNR SNR (7) Use st, JQ1H JQ1H JQ1H Shov	_8 Waitii DR2 (JDR2 ((3)	rraffic x Setting word (4)
His Call His Call His Call His Call My S TX Pict Your UF Please below of CMD Na FTP Se User ID Passw	JH3FDR come to Ir dy for star Server RL Master select or data. ame JC rver iq ord ##	Name nage Con t !!! >>> er r is regist ie of them Q1HDR (OM troller Easy>>> ered as right li and input	SNR SNR St. JQ1H JQ1H Shot	_8 Waitii DR IDR2 (JDR3 (3 (5	rraffic ng !!! × Setting word (4)
His Call His Call His Call His Call My S TX Pict Your UF Please below G CMD N: FTP Se User ID Passw Director	JH3FDR come to Ir dy for star Server RL Master select or data. ame JC rver j.) ord ## ory ii	Name nage Con t !!! >>> er r is regist te of them 01HDR (01HDR (01HD	OM troller Easy>>> ered as right li and input	SNR SNR St, JQ1H JQ1H JQ1H Shot	_8 Waitii DR IDR IDR2 (IDR3 (3 (5	Traffic ng III X Setting Word) (4)) (6)

My Server Setup

When sending HTML, video, etc., you need to use My Server.

① Please press the button of My Image Server.

In addition, when using with My Server, you need to register in the Easy URL, so if you let me know the URL to use, It will be registered.

HTML やビデオ等を送信する場合は My Server の使用が必要となります。

① My Image Server のボタンを押してください。

なお、My Server と使用する場合は Easy の URL に登録する必要が あります ので使用する URL を当方にメールでお知らせくだされば登録いたします。

① All registered names registered in Easy Master Data are displayed. Please click to select the registration name to use.

2 When you choose, the registered name to be used by Easy and URL

- registered in Easy Master Data will be displayed.
- 3 Please input the FTP server corresponding to 3. It is OK without ftp: //.
- 4 ID name of FTP server
- (5) Password

(6) Please input if you use the directory. Depending on the server to be used, it may be specified, so follow the instructions of the server.

T Press "Use This Setting" to save data.

If nothing is displayed in 1, you needs to register as Easy's URL master, Please inform us of the URL by mail etc.

① Easy URL マスターに登録されている登録名がすべて表示されます。 使用する登録名をクリックして選んでください。

② 選ぶと Easy で使用する登録名および Easy マスターに登録されている URL が表示されます。

③②に対応する FTP サーバーをインプットしてください。 ftp:// はなくても OK です。
 ④ FTP サーバーの ID 名

- ⑤ パスワード
- ⑥ ディレクトリーを使用するのであればインプットしてください。 使用するサーバーに
- よっては指定される場合がありますので サーバーの指示に従ってください。
- ⑦ データの保存はこの"Use This Setting"を押してください。

もし、①に何も表示されない場合は Easy の URL マスターに登録が必要です。メール 等で URL をお知らせください。