


Simple Ver Es2.0.0 JS 8 Call 対応版（3 モード FT8/JS8Call/Vari 同時対応）

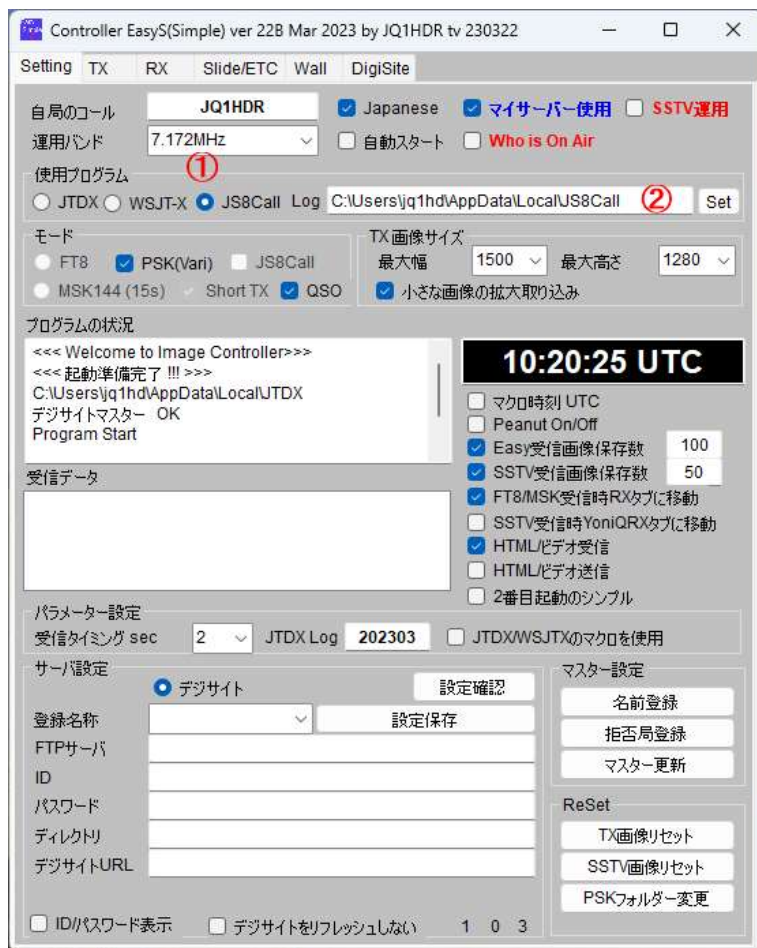

- ① JS8Call にチェックを入れて
- ② JS8Call のログディレクトリーを設定する。



- ③ FT8 を使用するプログラムをチェック
- ④ モードの JS8Call にチェックを入れる

Variを使用するのであればPSK(Vari)にチェックを入れる。

JTDX, JS8Call, Vari を起動する。

Simple を起動し WhoisOnAir にチェックを入れる。

以上で3つのモードすべてに対応します。

なお、JS8Call の送信は JS 8 Call 側で Saved ボタンをクリックし Edit Saved Message を選び XXXXX/IMAGE をマクロに登録してください。送信は Saved ボタンを押して XXXXX/IMAGE を選べば自動的に送信します。

Simple Ver Es2.0.0 JS 8 Call(3 modes FT8/JS8Call/Vari simultaneously compatible)

Controller EasyS(Simple) ver 228 Mar 2023 by JQ1HDR tv 230322

Setting TX RX Slide/ETC Wall DigiSite

My Call **JQ1HDR** ☐ Japanese ☒ Use My Server ☐ Use SSTV

On Air Band 7.172MHz ☐ Auto Start ☐ Who is On Air

Used Program **JS8Call** Log C:\Users\jq1hd\AppData\Local\JS8Call **Set**

Mode ☐ FT8 ☒ PSK(Vari) ☐ JS8Call ☐ MSK144 (15s) ☒ Short TX ☒ QSO ☒ Expansion when smaller pic is loaded

TX Picture Size Max Width 1500 Max Height 1280

Program Status *** プログラム停止 ***

Received Data

2023-03-23 06:35:56 7.172 MHz JS8
2023-03-23 06:35:30-17 0.7 4038 A JEX7DZp0A0y7 0 0

Parameter Setting Decode Timing sec 2 JTDX Log 202303 ☐ Use JTDX/WSJTX Macro

Server Setting ☒ DigiSite ☐ My Server for TX **Setting Check**

DigiSite Name Save

FTP server

ID

Password

Dir

DigiSite URL

☒ Use My Server for IMAGE and HTML Using Server JQ1HDR3 ☐ Show ID/Pswd ☐ No Refresh DigiSite 1 0 3

Master Setting

Name List

Refuse List

Refresh Master

ReSet

TX Image Reset

SSTV Image Reset

PSK Folder Change

- ① Check JS8Call
- ② Set the Log directory of JS8Call.

Controller EasyS(Simple) ver 228 Mar 2023 by JQ1HDR tv 230322

Setting TX RX Slide/ETC Wall DigiSite

My Call **JQ1HDR** ☐ Japanese ☒ Use My Server ☐ Use SSTV

On Air Band 7.172MHz ☐ Auto Start ☐ Who is On Air

Used Program **JTDX** Log C:\Users\jq1hd\AppData\Local\JTDX **Set**

Mode ☒ FT8 ☒ PSK(Vari) ☒ JS8Call ☐ MSK144 (15s) ☒ Short TX ☒ QSO ☒ Expansion when smaller pic is loaded

TX Picture Size Max Width 1500 Max Height 1280

Program Status *** プログラム停止 ***

Received Data

2023-03-23 06:35:56 7.172 MHz JS8
2023-03-23 06:35:30-17 0.7 4038 A JEX7DZp0A0y7 0 0

Parameter Setting Decode Timing sec 2 JTDX Log 202303 ☐ Use JTDX/WSJTX Macro

Server Setting ☒ DigiSite ☐ My Server for TX **Setting Check**

DigiSite Name Save

FTP server

ID

Password

Dir

DigiSite URL

☒ Use My Server for IMAGE and HTML Using Server JQ1HDR3 ☐ Show ID/Pswd ☐ No Refresh DigiSite 1 0 3

Master Setting

Name List

Refuse List

Refresh Master

ReSet

TX Image Reset

SSTV Image Reset

PSK Folder Change

- ③ Check programs that use FF8.
 - ④ Check the mode JS8Call.
- IF you use Vari, check PSK(Vari).

Start JTDX, JS8Call and Vari, then start Easy Simple and check Who is On Air.

All three modes are supported.

To send JS8Call, click the Saved button on the JS8call side and select edit saved message.

Please register Your Call/IMAGE in the macro.

To send, press the Saved button and select your call/IMAGE, it will be sent automatically.